

HSM Vertical Balers – Basic Troubleshooting Steps

- If Control screen is blank – check machine master switch is on, machine plugged in and circuit breaker at switchboard is not tripped
- If pressure error comes up – check correct material is selected for what is being baled i.e. Cardboard or Film
- If machine is coming up bale full too early, check correct material has been selected and red lens on top of the blue inclination sensor (one with curly cord on top of press plate) is free of dust
- If motor temperature comes up – switch machine off at the wall, allow an hour for it to cool down and turn in back on.
- For all errors showing on screen – try switching off machine at the wall, leaving for several minutes then turn it back on
- Record any error numbers

No Joy? Call us back Free on 0508 474 663 and ask for a
Service Technician Callout

